

CL017–03

# REMOVAL

1. LHD:
REMOVE BRAKE BOOSTER (See page BR–15)

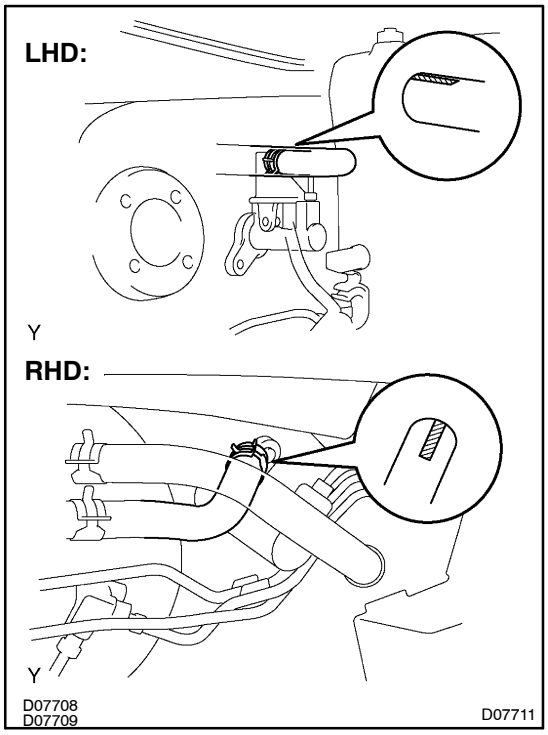


2. DISCONNECT RESERVOIR HOSE
(a) Using pliers, disconnect the clip.
(b) Disconnect the reservoir hose from the inlet union.
(c) Use a container to catch the fluid.

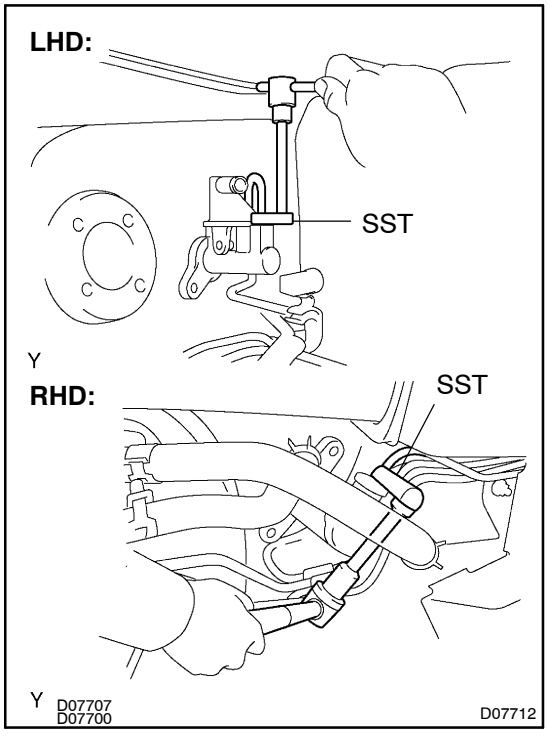


3. DISCONNECT CLUTCH LINE
(a) Using SST, disconnect the clutch line.
SST 09023–00100
(b) Use a container to catch the fluid.

4. REMOVE CLIP AND PIN
Using needle–nose pliers, remove the clip and pin.

5. REMOVE 2 MOUNTING NUTS AND PULL OUT MASTER CYLINDER