


POWER STEERING GEAR

COMPONENTS

SR0YX–02

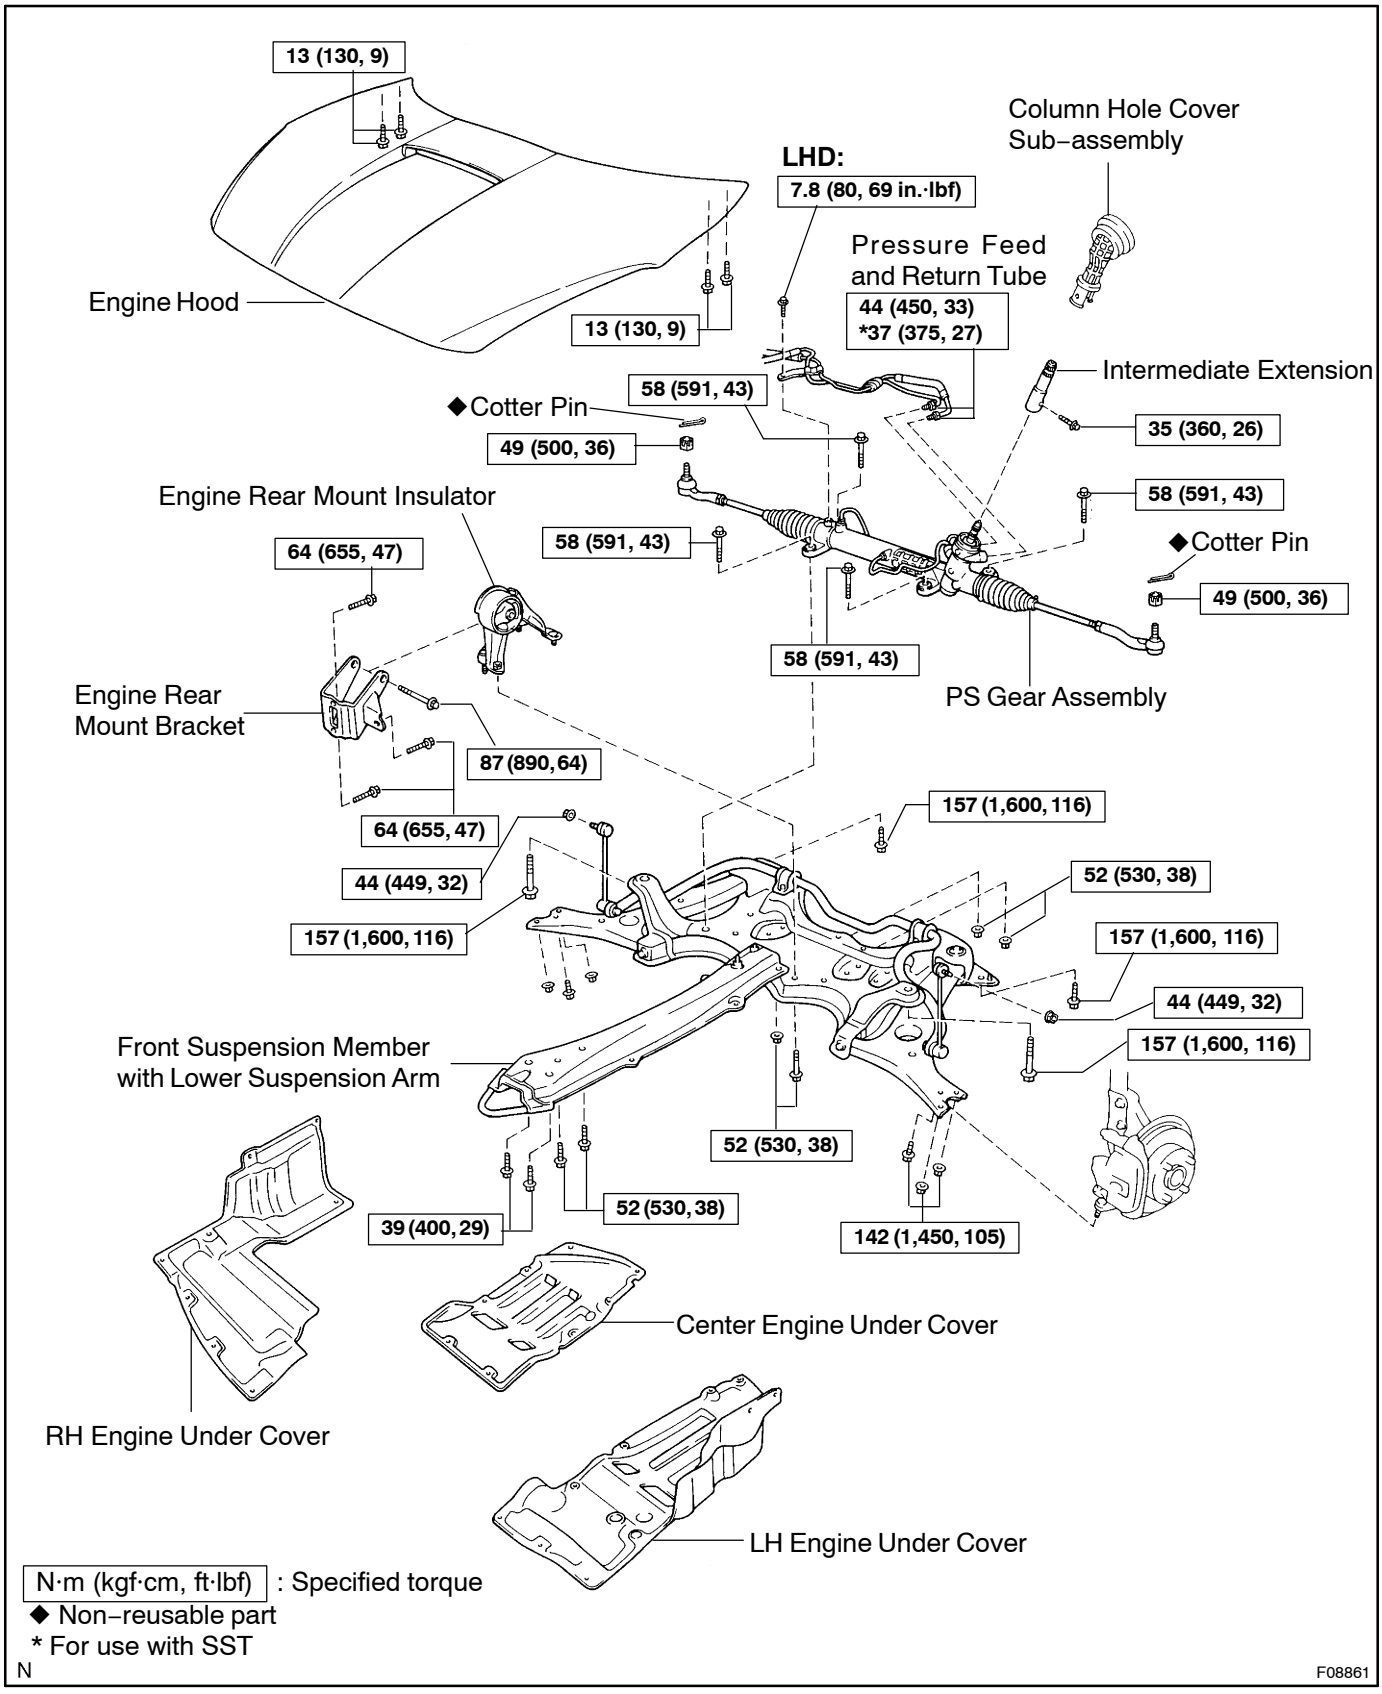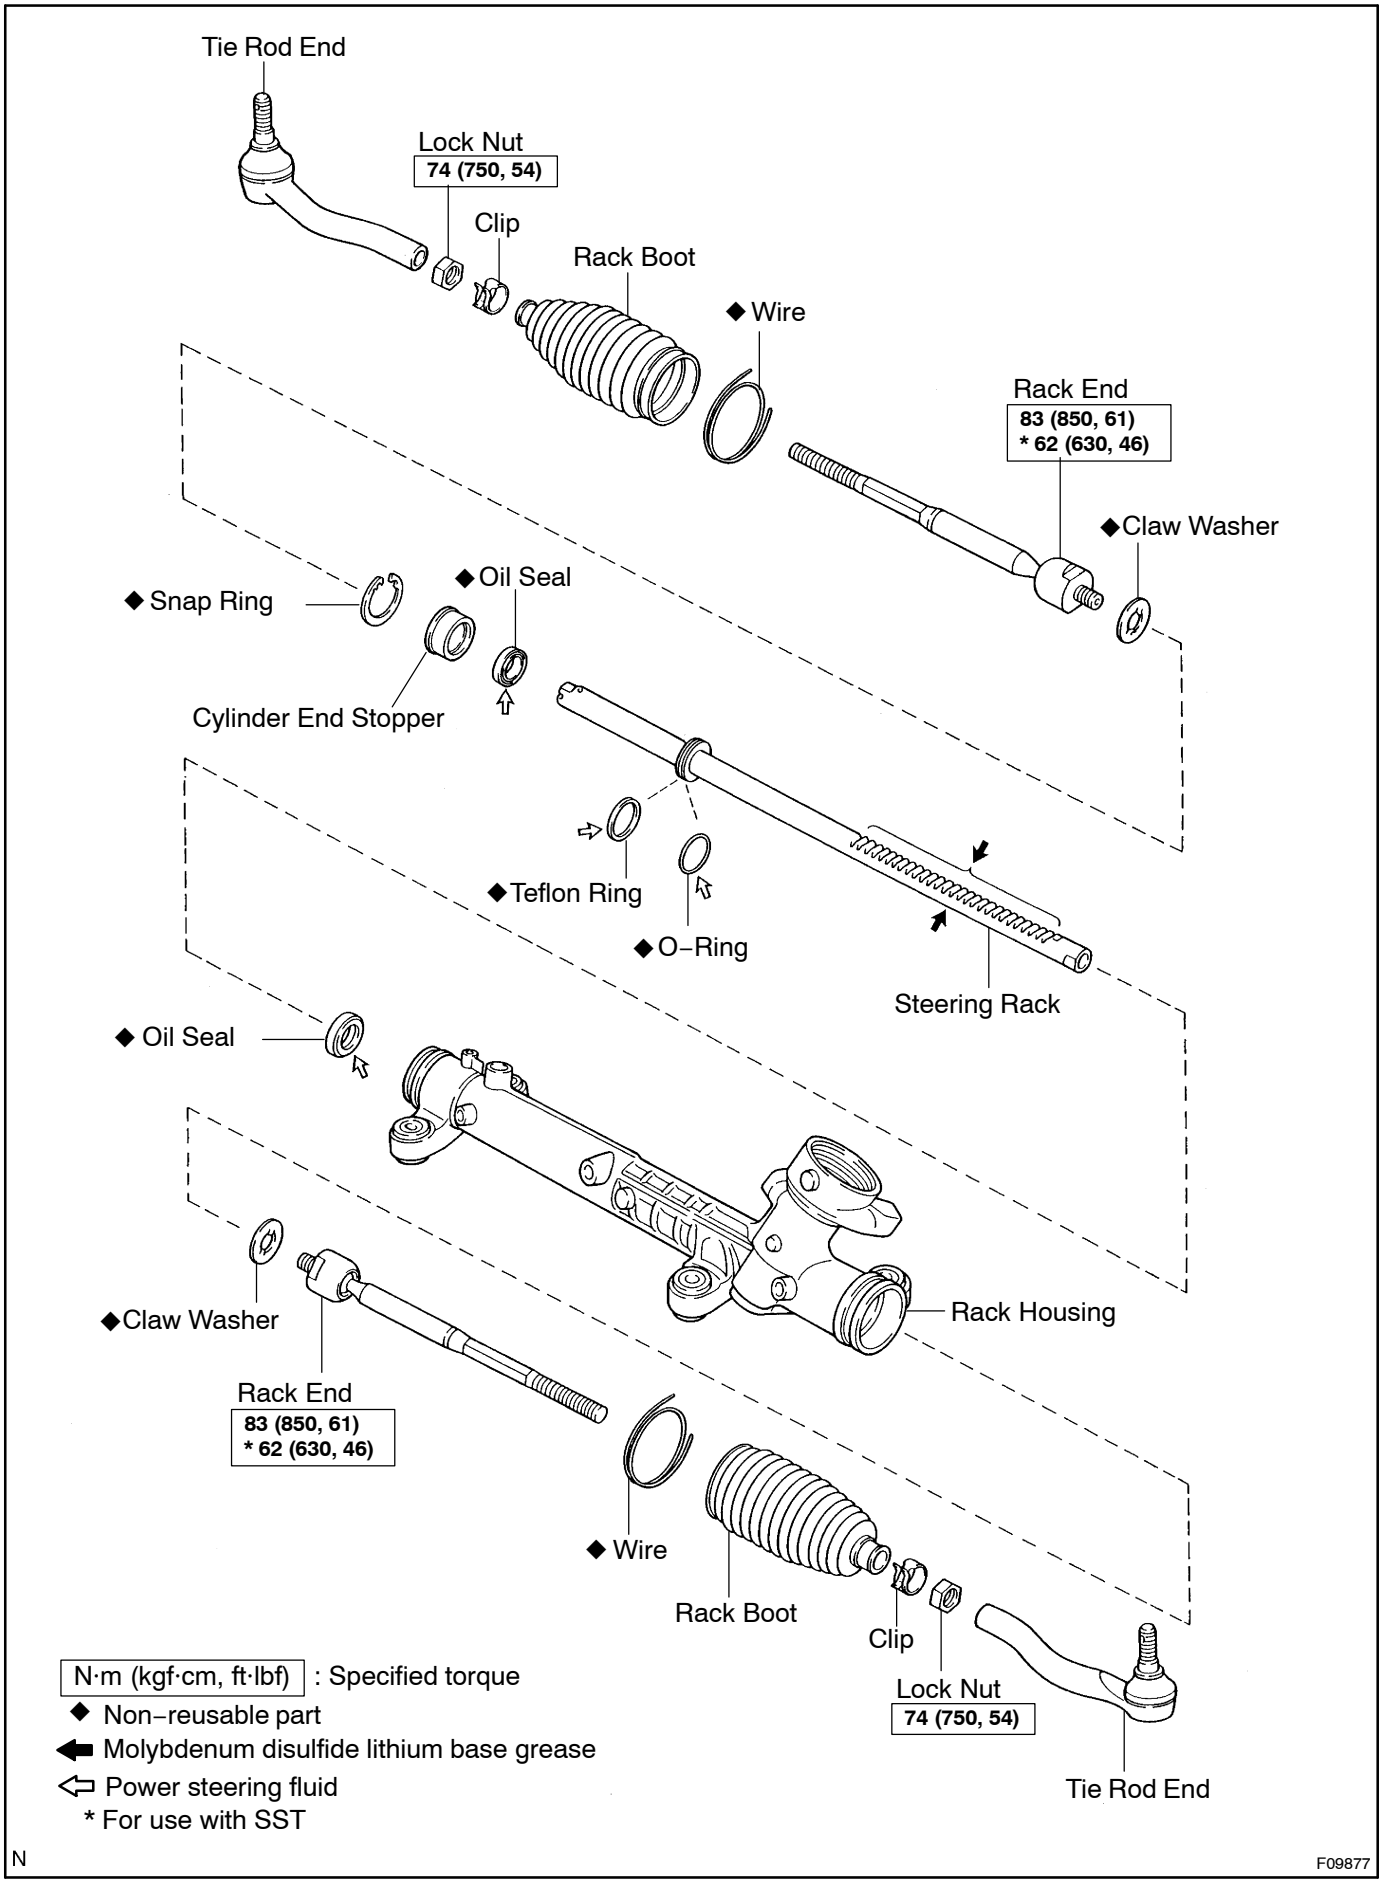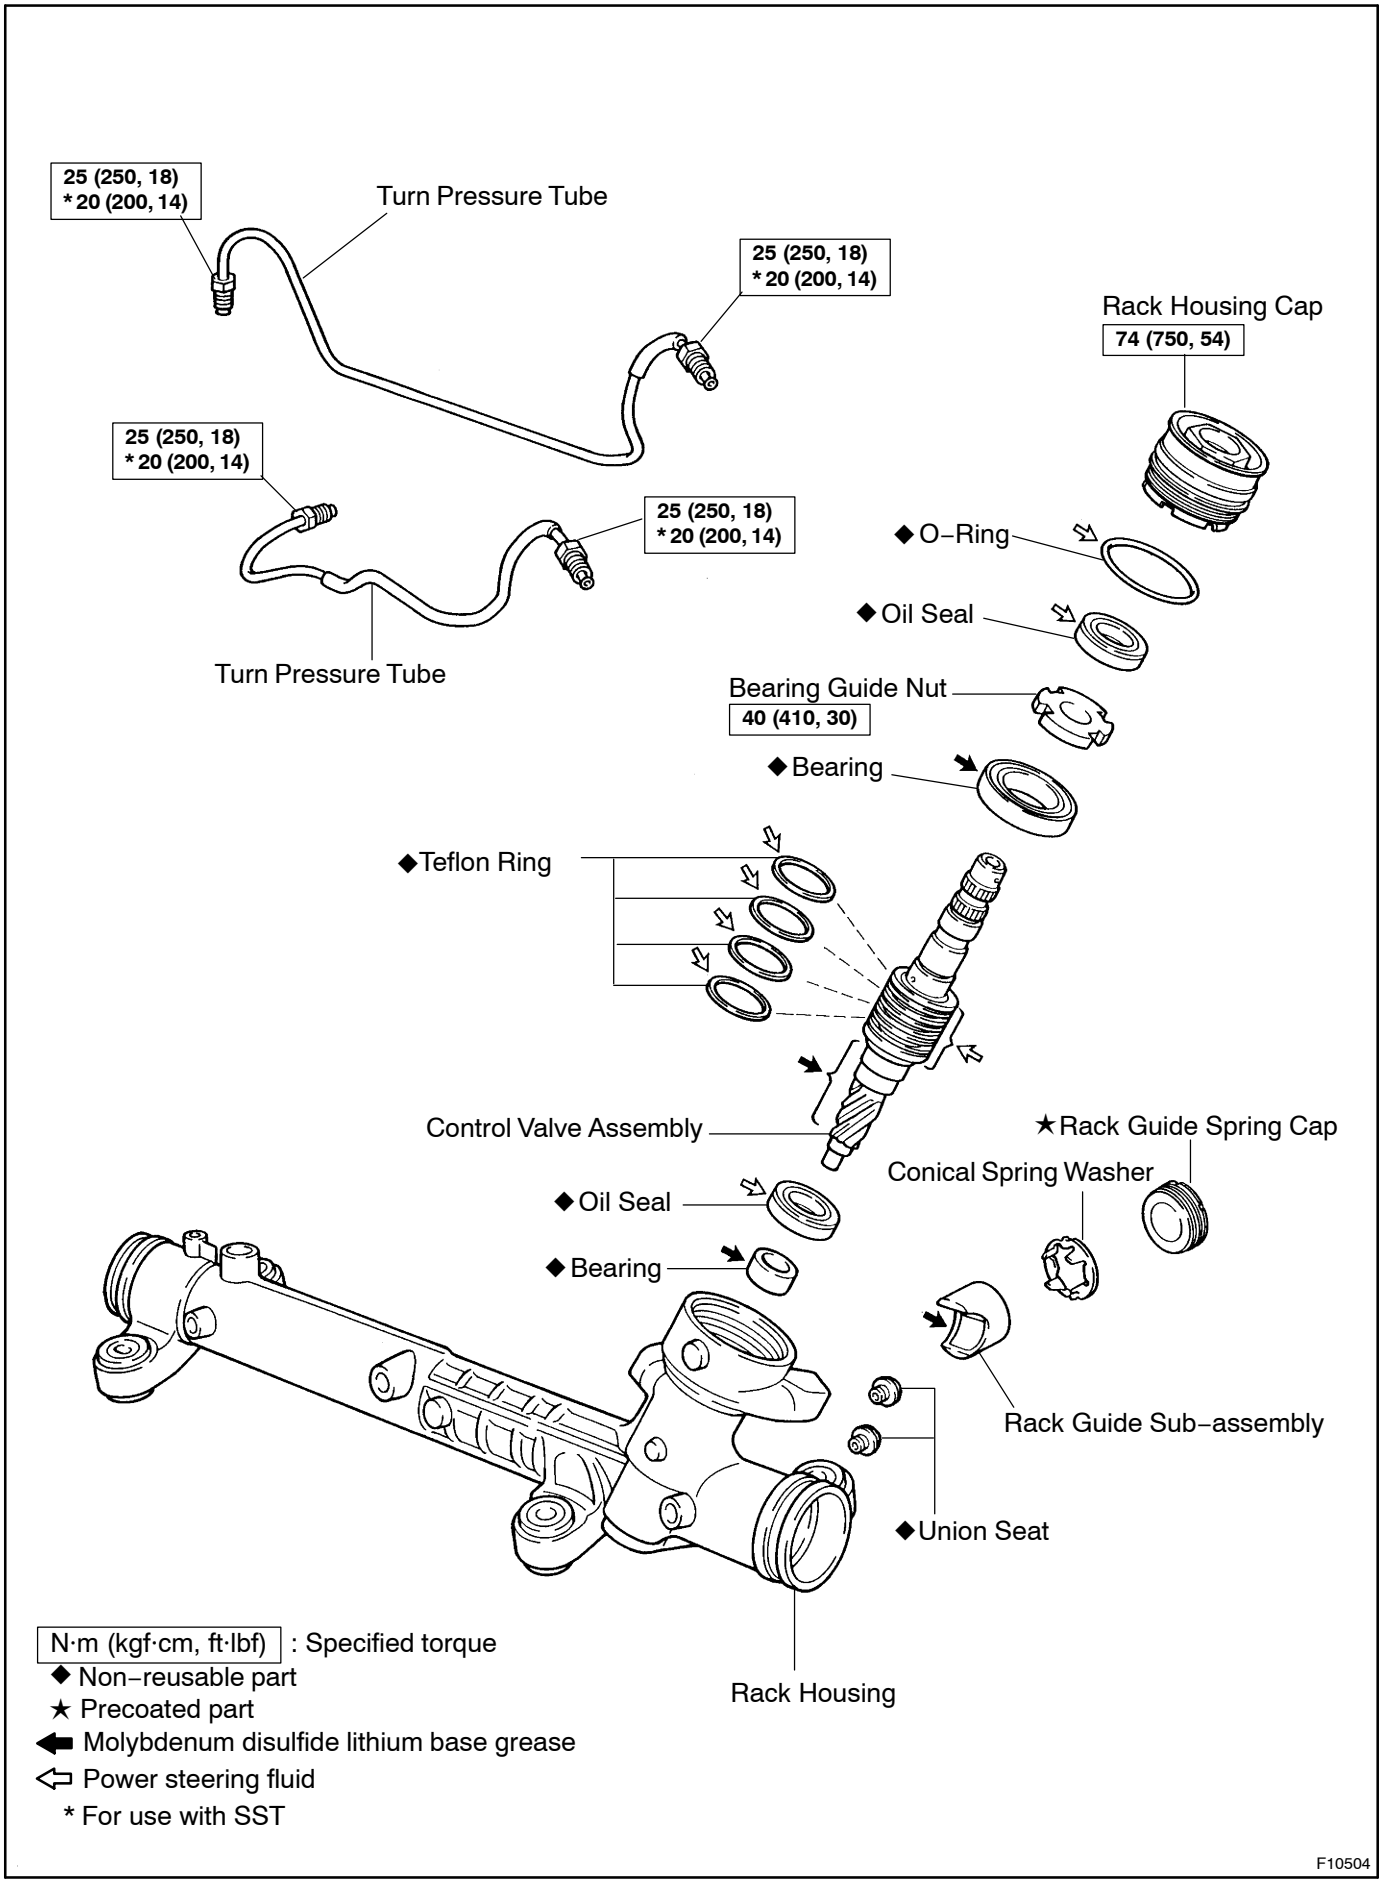


Tie Rod End
Lock Nut
74 (750, 54)
Clip
Rack Boot
◆ Wire
Rack End
83 (850, 61)
* 62 (630, 46)
◆ Claw Washer
◆ Snap Ring
◆ Oil Seal
Cylinder End Stopper
◆ Teflon Ring
◆ O–Ring
Steering Rack
◆ Oil Seal
Rack Housing
◆ Claw Washer
Rack End
83 (850, 61)
* 62 (630, 46)
◆ Wire
Rack Boot
Clip
Lock Nut
74 (750, 54)
Tie Rod End
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Molybdenum disulfide lithium base grease
Power steering fluid
* For use with SST
N
F09877


25 (250, 18)
*20 (200, 14)
Turn Pressure Tube
25 (250, 18)
*20 (200, 14)
Rack Housing Cap
74 (750, 54)
25 (250, 18)
*20 (200, 14)
◆O–Ring
25 (250, 18)
*20 (200, 14)
◆Oil Seal
Turn Pressure Tube
Bearing Guide Nut
40 (410, 30)
◆Bearing
◆Teflon Ring
Control Valve Assembly
★Rack Guide Spring Cap
Conical Spring Washer
◆Oil Seal
◆Bearing
Rack Guide Sub–assembly
◆Union Seat
Rack Housing
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
Molybdenum disulfide lithium base grease
Power steering fluid
* For use with SST
F10504